Operating Instructions

Washing Machine

Cylinda Sverigetvätten 09

Dear Cylinda customer!

Welcome to the family of Cylinda customers.

We hope that you will have many years of use from your new machine.

The machine has many features. To make the most of its functions, we recommend that you read the operating instructions before using the machine. The operating instructions include information on how you can help protect the environment.

Cylinda

Quick guide

1 Washing

1. Empty pockets and refasten zips.
2. Read the item's laundry label.
3. Sorting laundry.

NOTE!

Place underwired bras in a laundry net.

2 Load the laundry

1. Press the main power switch.
2. If the door is closed, press the Door opening button (key symbol). The red field lights up and the door opens after a few seconds.
3. Load the laundry and close the door.

3 Detergent compartment

1. Pour detergent into the main wash compartment, and pre-wash compartment as well if required. Pour fabric softener into the compartment on the right with the ❀-symbol.
2. If you use liquid detergent, follow the detergent manufacturer's recommendations.

4 Select the programme

1. Select a programme by turning the programme selector.
2. Select any options and settings.
3. Press the Start/Stop button.

5 Program finished

1. The text END on the display indicates that the wash programme has finished.
2. The washer door opens automatically once the programme has finished.
3. Remove the load.
4. Turn off the main power switch.

If you have small children or pets at home, close the washer door once you have removed the laundry.

Contents

Before using your machine for the first time 5
- Transport protection 5
- Packing material 5
- Washer door 5
- Checking water hardness 5

Safety instructions 6
- General 6
- Installation 6
- Overflow guard function 6
- Transport/Winter storage 6
- Recycling 6

Child safety 7
- Keep an eye on children! 7
- Automatic door opening 7

Description of the washing machine 8

Detergent compartment 8

Front panel 9

Options button 9

Advice and tips before washing 10
- Sorting your laundry 10
- Clothing 10
- Laundry labels 10
- Laundry label symbols 10
- Coloured cotton 11
- Unbleached linen 11
- Wool 11
- Rayon fibres and synthetic fibres 11
- Reducing allergic reactions 11
- Save time and energy 11
- Economy and efficiency 11
- Detergents 11
- Dyeing fabrics 11

Washing 13
- Sort your laundry. 13
- Turn on the main power switch. 13
- Open the washer door and load the washing 13
- Add detergent and fabric softener, as required 13
- Select the programme 14
- Select options and settings 16
- Close the door and press the Start/Stop button 17
- Once the program has finished 17

Care and cleaning 18
- Checking the filter and drainage pump 18
- Cleaning the detergent compartment 18
- Cleaning the outside of the machine 18
- Cleaning the inside of the machine to avoid unpleasant smells 18
- Rinse holes under the agitator 19
- If you have hard water 19

Troubleshooting 20
- The washer door will not open 20
- The machine will not start 20
- Error messages 21

Technical information 22
- Technical data 22
- Information for test institute 22

Transport protection 23

Contents

Installation 24

Positioning the washing machine 24

Adjusting the feet 24

Connection to water supply 24

Drainage connection 24

Electrical installation 25

Programme plate in multiple languages 25

Service 26

Before contacting the service division 26

Before using your machine for the first time

Transport protection

Remove any transport protection devices before installing the machine. See the “Transport protection devices” chapter.

Packing material

Please sort waste materials in accordance with local guidelines.

Washer door

- The washer door cannot be opened until the machine is connected to the electricity supply.
- To open the door manually, see the section entitled “The door will not open" in the “Troubleshooting” chapter.
- It is not possible to start the machine with the door open.
- To open the washer door while a programme is running, see the "Wash" section under the heading "Close the door and press the Start/Stop button".

Checking water hardness

The quantity of detergent needed depends, amongst other things, on how hard the water is. See the detergent pack for details. Phone your local water company to check the water hardness in your area.

NOTE!

Each machine is tested before leaving the factory. A small amount of water may remain in the drain pump, though this does not affect quality or damage the machine.

Safety instructions

General

- Read the operating instructions and keep them in a safe place.
- Installation of water and electricity, if required, should be carried out by a qualified professional.
- The machine should only be used for washing items as described in these instructions. It is not intended for dry cleaning.
- Use only detergent intended for machine washing!
- Remove any transport protection devices before using the machine, see the “Transport protection” chapter.
- Repairs and maintenance relating to safety or performance must be carried out by a qualified professional.
- Damaged mains cables must only be replaced by a qualified electrician.
- The machine is not designed to be used by persons (even children) that are physically or mentally handicapped or lack experience and knowledge. Such persons must receive instruction in how to use the machine from the person responsible for their safety.
- Children must be watched to ensure they do not play with the machine.

Installation

See the "Installation" chapter.

Overflow guard function

If the machine’s water level rises above the normal level, the overflow guard function begins to pump water out and shuts off the water intake. If the water level has not dropped within 60 seconds, the program is terminated.

Transport/Winter storage

If the machine is to be transported or stored in unheated premises where the temperature can fall below freezing, do as follows:

- Empty the filter and drainage pump (see the “Care and cleaning” chapter).
- Shut off the water to the washing machine, loosen the supply hose to the intake valve and let the water run out from the valve and hose.
- After emptying the pump, a small amount of water may remain in the machine. This does not affect quality or damage the machine.

Recycling

This machine is manufactured and labelled for recycling. In order to prevent injuries, the machine must be made unusable once the decision has been taken to dispose of it. Contact your local authority for information about where and how your machine can be recycled correctly.

Child safety

Keep an eye on children!

- Always close the door and start the programme immediately once you have added detergent.
- Do not allow small children to use or play with the washing machine.
- Store detergent and fabric softener out of the reach of children.

Automatic door opening

The machine comes with an automatic door opening function, which means that the door opens automatically once the programme has finished.

If you wish to prevent small children or pets from climbing into the machine, you can deactivate the automatic door opening function.

1. Turn off the machine using the main power switch.
2. Press the Door Open button while simultaneously pressing the main power switch. Release the buttons.
3. Press the Key button and the red field goes out. Automatic door opening is now deactivated.
4. Press the Start/Stop button to store the setting.

If you want to reactivate the function, follow the instructions above. When you press the button with the key symbol (point 3), the red fields light up. Store the setting by pressing the Start/Stop button.

Description of the washing machine

1. Detergent compartment
2. Main power switch
3. Programme panel
4. Type plate
5. Hatch - drainage pump
6. Drainage pump (behind hatch)
7. Washer door
8. Outer door (not all models)

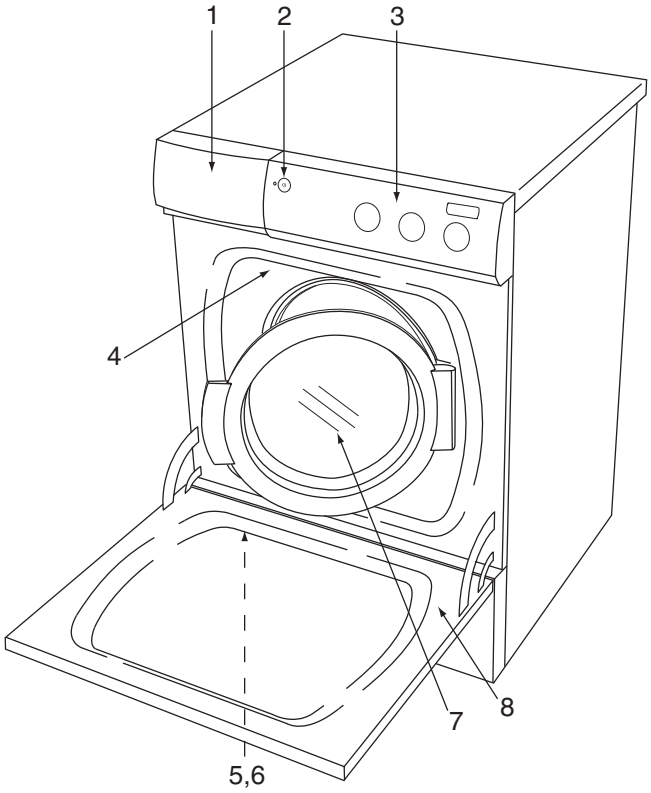

Detergent compartment

1. Pre-wash
2. Main wash
3. Fabric softener compartment

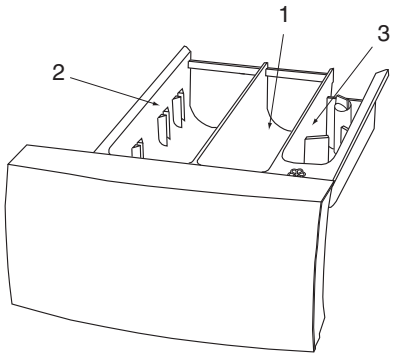

Front panel

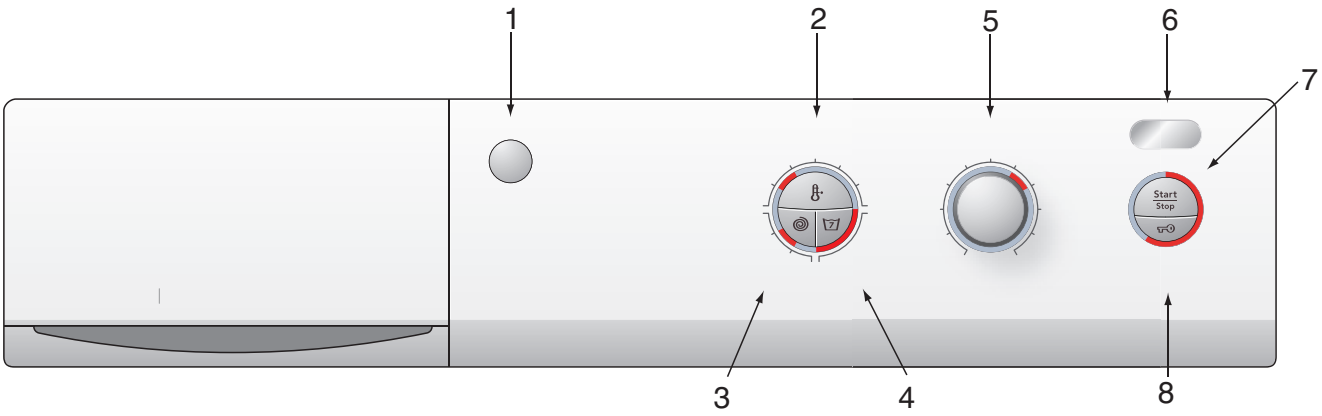

1. Main power switch
2-4. Options buttons
5. Programme selector
6. Display window
7. Start/Stop
8. Door opening

Options button

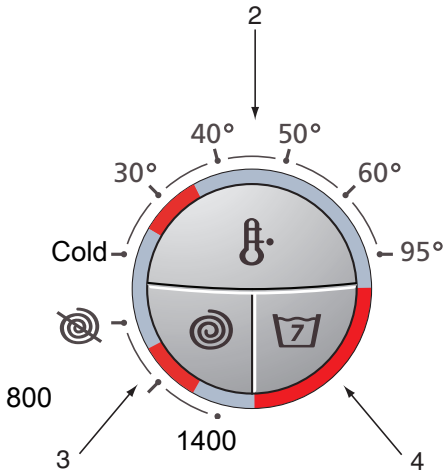

2. Button for selecting Temperature
3. Button for selecting Spin speed
4. Button for selecting Super Rinse

Advice and tips before washing

Here are some tips that may help you before washing.

Sorting your laundry

Sort items according to:

- how soiled they are
- colour
- material

Clothing

1. Do up zips and close Velcro straps so that they don’t harm fabrics.
2. New coloured items may contain excess dye and should therefore be washed separately the first few times.
3. Turn delicate items inside out. This reduces the risk of burling and fading.
4. Empty pockets and wash them inside out if possible.

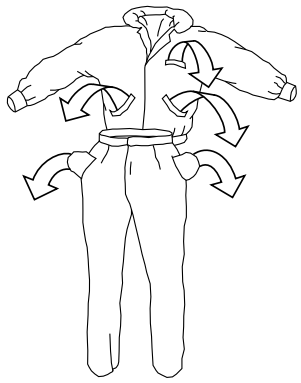

Laundry labels

Look at the item's laundry label. The table below shows suitable wash programmes for different materials and wash loads. Using modern washing machines and detergents, for example compact detergents, you can usually wash at lower temperatures. It is a good idea to use trial and error to find out what produces the best results.

Laundry label symbols

Laundry labels	Material	Program	Load
95°	Cotton, linen, white and light-coloured items.	White 60 °C to 95 °C	1/1 drum
60°	Cotton, linen. Dark-coloured items.	Colour 60 °C	1/1 drum
60°	Polyester, cotton/polyester, nylon. White items.	Synthetic 60 °C	1/2 drum
40°	Rayon, acetate, acrylic. Non-colourfast items.	Synthetic 40 °C	1/2 drum
40°	Polyester, cotton/polyester, nylon. Coloured items.	Synthetic 40 °C	1/2 drum
30°	Silk and very delicate items	Synthetic 30 °C	1/3 drum
	Items labelled with the IWS or Superwash mark	Wool/Hand 40 °C	1/3 drum

Advice and tips before washing

Coloured cotton

Coloured cotton items with the washing instruction 60 °C should be washed at 60 °C for the first time in order to remove any excess dye. If you do not do so, there is a risk that the colour will run. Use detergent without bleach in order to preserve the colour of the fabric.

Unbleached linen

Unbleached linen fabrics should be washed at 60 °C, using detergent containing no bleach or optical whiteners. Heavily-soiled linen can occasionally be washed at higher temperatures, but not too often because the heat can destroy the linen's shine and strength.

Wool

These fabrics are labelled for either machine wash or for hand wash. The machine's Wool/Hand programme is at least as gentle as washing by hand.

Wool is especially sensitive to processes such as washing.

If you do not wish to spin dry, you can squeeze out the water using terry towels. In this case select No spin.

To find out how to select this setting, see the "Washing" chapter. However, most garments can withstand a short spin. Choose a short spin by selecting a spin speed of 800 rpm or less.

Rayon fibres and synthetic fibres

Materials made of rayon fibres, such as viscose, and some synthetic fibres are very delicate and require much space. Only half fill the drum when washing and choose a programme with a ??? rpm spin or lower.

NOTE!

Viscose and acetates are fragile when wet.

Reducing allergic reactions

The washing machine has a Super Rinse option. Use this for people with sensitive skin, such as those with allergies and small children.

Save time and energy

Use the Snabb vit (White) programme to save time and energy. This programme has a shorter main wash than Normal vit / kulör (Normal), but is often sufficient for lightly soiled washing.

Economy and efficiency

You can save a lot of energy by not using higher temperature programs than necessary.

- Select Quick if you just need to freshen up shirts or exercise clothes, for example. This will save both water and energy.
- If you select a fast spin speed, this reduces energy consumption when drying in a tumble dryer or drying cabinet.
- Avoid pre-washing. Modern machines and detergents clean effectively without pre-washing. Pre-washing is only necessary for heavily soiled washing.

Detergents

Eco-labelled detergents are less harmful to the environment.

Detergent overdosing does not give better washing results; it merely causes a greater impact on the environment.

Try to use less detergent, and increase only if you are not satisfied with the results.

Dyeing fabrics

If you want to dye fabrics in the machine, select the Normal vit / kulör (Normal) programme with the Super Rinse option. Select temperature according to the dye manufacturer's recommendations.

Choose a low spin speed if the fabric to be dyed is a blended material such as polyester/cotton.

NOTE!

Add the dye directly to the washing drum – not to the detergent compartment. After dyeing, you should run the machine empty using the same program. Use the normal amount of detergent.

Advice and tips before washing

NOTE!

Because of environmental concerns we discourage the use of strong chemicals.

When using agents for bleaching or stain removal, there is a risk of rust (corrosion) and discolouration of the machine.

Washing

1 Sort your laundry.

See the "Advice and Tips before washing" section.

Place underwired bras in a laundry net.

Empty pockets. Coins, nails and the like can cause damage to the machine and fabrics. See the "Advice and Tips" section before washing.

2 Turn on the main power switch.

3 Open the washer door and load the washing

If the door is closed, press the Door opening button (key symbol). The red field will light up and the door will open once all water has drained from the machine. Load the laundry. The laundry programme chart shows how much laundry can be washed with each programme.

4 Add detergent and fabric softener, as required

The detergent packaging will have recommendations for how much detergent you should use. The machine holds 7 kg of laundry. If you only have a small amount of laundry in the machine, you can reduce the amount of detergent used.

Powder detergent

Pour the powder into the compartment for the main wash, and pre-wash as well if desired.

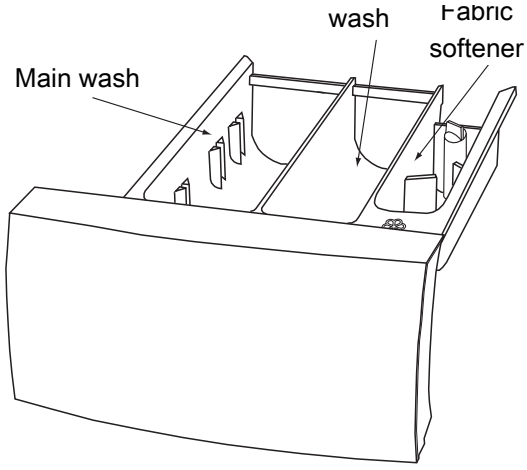

Liquid detergent

When using liquid detergent, follow the detergent manufacturer's recommendations. We recommend always using a wash ball with very thick liquid detergent.

Wash ball or net

If you use a wash ball or net, place it directly in the drum and select a programme without pre-wash.

NOTE!

Detergent overdosing does not give better washing results; it merely causes a greater impact on the environment.

Try using less detergent, and increase only if you are not satisfied with the results.

Fabric softener

Pour the fabric softener into the compartment with the ❀ symbol. Follow the recommendations on the fabric softener packaging.

NOTE!

Do not fill above the compartment's maximum fill level. Otherwise fabric softener will run in too early, which impairs the washing effect.

Washing

5 Select the programme

You can select a programme by turning the programme selector. A red field lights up beside the selected programme, and the estimated programme time is shown on the display. Start the programme by pressing the Start/Stop or go on to options and settings.

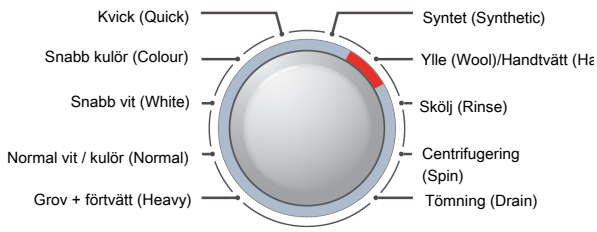

Grov + förtvätt (Heavy)

Program for heavily soiled laundry, with dirt that needs to be fully dissolved before the main wash. A pre-wash is used to do this. You can select the temperature freely, so follow the washing instructions for each garment. The highest temperature, 95 °C, is suitable for very heavily soiled laundry. The spin speed can be selected freely. The machine adapts the program time and water consumption to the load size.

Normal vit / kulör (Normal)

Program for normally to heavily soiled laundry, whites and colors. You can select the temperature freely, so follow the washing instructions for each garment. 60 °C is a good temperature for heavily soiled cotton garments, as well as for garments worn next to the skin. Select 40 °C if the laundry is less soiled. The spin speed can be selected freely. The machine adapts the program time and water consumption to the load size.

Snabb vit (White)

A standard program for lightly to moderately soiled laundry. The temperature can be selected freely, so follow the washing instructions for each garment. Garments worn next to the skin ought to be washed at 60 °C. The spin speed can be selected freely. The machine adapts the program time and water consumption to the load size.

Snabb kulör (Colour)

Standard program for lightly soiled laundry. The temperature can be selected freely, so follow the washing instructions for each garment. Garments worn next to the skin ought to be washed at 60 °C. Very lightly soiled laundry, however, often comes clean at 40 °C. The spin speed can be selected freely.

Kvick (Quick)

Fast program for laundry that just needs freshening up. The program can be run at any temperature, so follow the washing instructions for each garment. The lower the selected temperature, the shorter the program time. Garments worn next to the skin ought to be washed at 60 °C. The spin speed can be selected freely.

Syntet (Synthetic)

Program for synthetics, blended materials, and permanent press cotton. Suitable for shirts and blouses. The temperature can be selected freely, so follow the washing instructions for each garment. Garments worn next to the skin ought to be washed at 60 °C. Many synthetics will come clean at 40 °C too. The maximum spin speed is 800 rpm.

Ylle (Wool)/Handtvätt (Hand)

A gentle laundry program for wool, silk, and garments that should be washed by hand. The highest temperature is 30 °C. This program has a short spin. The maximum spin speed is 800 rpm.

Skölj (Rinse)

This program performs one cold rinse cycle + spin. Suitable for laundry that just needs to be dampened and for cleaning cloths and mops.

Centrifugering (Spin) or Tömning (Drain)

To be used when you only want to spin the load or drain the water from the machine.

Washing

Programme chart

Program	Pre-wash	Main wash	Temp. °C	Rinses (number)	Max. RPM	Max. load	Water consumption (approx. liter)	Energy consumption (approx. kWh)	Programme time (approx. hrs and min.)
Grov + förtvätt (Heavy)	Yes	Long	95	5	1400	1/1	85	2,1	2:45
	Yes	Long	60	5	1400	1/1	75	1,2	2:40
Normal vit / kulör (Normal)	No	Long	60[1)]	5	1400	1/1	72	1,19	2:46
	No	Long	40[2)]	5	1400	1/1	72	0,66	2:30
Snabb vit (White)	No	Short	60[3)]	5	1400	1/2	55	0,8	2:15
Snabb kulör (Colour)	No	Short	40	5	1400	1/2	55	0,5	1:25
Kvick (Quick)	No	Short	40	2	1400	1/2	25	0,5	0:45
Syntet (Synthetic)	No	Short	40[4)]	3	800	1/2	30	0,4	1:15
Ylle (Wool)/Handtvätt (Hand)	No	Short	30	3	800	1/3	70	0,5	0:45
Skölj (Rinse)				1	1400	1/2	15	0,1	0:20
Centrifugering (Spin)					1400	1/2		0,1	0:15

[1] Test program in accordance with EN 60456.

[2] 40 °C program for test institute. Option function 40 °C must be selected.

[3] Short programme for test institutes. The 60 °C option must be selected.

[4] Synthetics programme for test institute. The *Super rinse* option must be selected.

The above table presents a few examples of the energy, water and time consumption of a few different programme settings. Consumption can vary according to water pressure, water hardness, water supply temperature, room temperature, load weight and content, variations in the power supply and selected options. In the examples provided here the rinse setting is set to Normal and no options are selected.

Washing

6 Select options and settings

By changing options and settings you can adjust the washing program to suit your own specific requirements.

The machine will remember which settings and options you chose for each program and will use them the next time you select that program. You can of course change the options if you want.

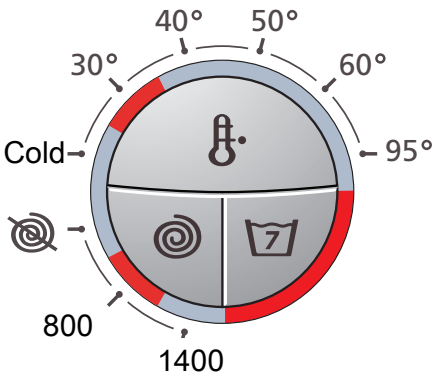

Temperature

Select temperature by pressing the Temperature button until the red field lights up beside the desired temperature.

You can select temperatures between 30 °C and 95 °C or Cold. If you select Cold, the washing temperature will be the same as that of the water coming into the machine.

For Wool/Hand it is not possible to select a temperature higher than 40 °C. See the table.

Spin speed/No spin

Select the spin speed by pressing the Spin button until the red field next to the spin speed you want lights up.

You can select speeds between 800 and 1400 rpm, No spin.

Spin at 800 rpm always signifies short spin.

For certain programmes, it is not possible to select a speed in excess of 800 rpm (see table).

No spin means that the program does not include a spin cycle and ends by draining.

Super rinse

Use the Super Rinse option if you want to increase the number of rinses. The maximum number of rinses is seven and varies depending on the selected program. This option cannot be selected with Wool/Hand, Rinse, Spin, or Drain.

The machine will remember this setting and use it the next time you select the programme in question. To deactivate Super Rinse, press the Start/Stop button for 3 seconds. The red field will go out.

A lighted red field around the button indicates that the option has been activated.

Washing

7 Close the door and press the Start/Stop button

Time remaining

The time remaining is shown in hours and minutes. Once a programme is selected, the estimated programme time is displayed. This may differ from time to time depending on the temperature of the water entering the machine and the size of the load. If the programme time is longer than the previous wash with the same programme, "0:01" will be displayed until the programme finishes. This is normal! The next time you use the programme under similar conditions, the estimated programme time will be more accurate.

To add or remove washing after the program starts

If you want to add or remove items after the programme has started, you can stop the programme by pressing and holding the Door opening button (key symbol) for three seconds. The red field will flash. When you restart the machine, add any extra detergent needed and close the door. The machine continues automatically from the point where the programme was interrupted.

Stopping or changing a programme

You can also stop a programme by pressing the Start/Stop button for three seconds. To restart the machine, select a new programme, add any extra detergent needed and press the Start/Stop button.

NOTE!

Do not open the detergent compartment while the machine is running.

8 Once the program has finished

Once a programme is finished, "End" appears on the display.

The door opens automatically once the program has finished. If you want to deactivate "automatic door opening", see the Child safety chapter.

- Remove the load.
- Turn off the main power switch, this will save energy.

If you have small children or pets at home, close the washer door once you have removed the laundry.

Care and cleaning

Checking the filter and drainage pump

The washing machine has a filter, where coins, hairpins and the like can get caught. To clean the filter and drainage pump:

1. Make sure the machine is empty of water and that it is switched off at the mains.

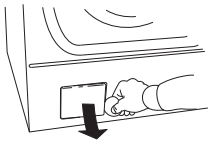

2. Open the hatch for the drainage pump as shown in the illustration.



3. Drain out the water, into a bowl, for example, by unhooking the drainage hose from the pin inside the hatch.

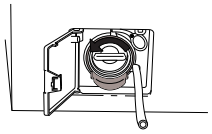

4. Open the pump by screwing the cover anti-clockwise. Remove the cover with the filter.

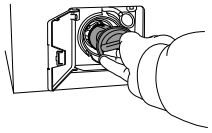

5. Remove any objects or rubbish from the pump housing. Check to see that the pump blades, right at the back, will rotate.



6. Screw on the cover, replace the drainage hose on the hatch pin and close the hatch.

Cleaning the detergent compartment

Pull the detergent compartment out as far as it will go.

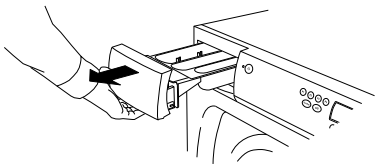

Then pull it up and out as shown in the illustration.

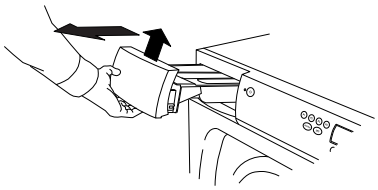

Rinse the compartment and scrub it clean. Replace the compartment.

Cleaning the outside of the machine

Clean the outside of the machine and the program panel with a mild cleaner. Do not use any solvents, as these can damage the machine.

NOTE!

Do not run the detergent compartment through a dishwasher!

Do not hose down the machine with water!

Cleaning the inside of the machine to avoid unpleasant smells

Modern detergents often allow clothes to be washed at low temperatures. This means that small deposits can build up in the machine. These, in turn, may lead to unpleasant smells developing.

To avoid this, we recommend running a 95 °C wash programme once a month. When you do this, use a small quantity of detergent. It is not necessary to put any washing in the machine.

Care and cleaning

Rinse holes under the agitator

If you think that objects such as nails or paper clips, may have fallen into the wash drum, you should check the container under the agitator. Such objects can rust and cause spots on clothing. Nails and other sharp objects can cause holes in fabrics.

Do as follows:

1. Insert a screwdriver or the like into the central hole on the agitator and carefully pry to the left.

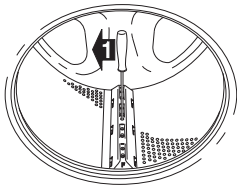

2. Grasp the agitator and pull it towards you using your other hand, as shown in the illustration.

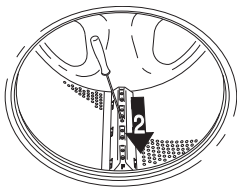

3. Lift the agitator.
4. Remove any objects.
5. Place the agitator in the mounting hole with the F-mark towards you. Ensure that all the agitator fasteners are in their holes in the drum. Push it away from you until it catches.

If you have hard water

If you live in an area with hard water (high limescale content), a greyish-white coating may form on the washer drum. To remove this, empty a sachet of citric acid, approx. 20 gram, into the washer drum and run any 95 °C programme. Repeat if necessary.

Troubleshooting

The washer door will not open

1. Check that the main power switch is on.
2. Has the power supply been cut off? Check the house fuses (circuit breakers). The washer door cannot be opened using the button with the key symbol if the power supply has been cut off.

If nothing else works, the washer door can be opened as follows:

- This must only be done in an emergency if the machine's glass door does not open automatically when the programme has finished.
- First check that there is no water left in the machine. If there is any water left and you are unable to run the Drain programme, empty the machine by detaching the drainage hose. This is described under the heading “Checking the Filter and Drainage pump” in the “Care and Cleaning” chapter.
- Make sure that the mains power switch is off and that the plug has been removed from the wall socket.
- Open the hatch to the drainage pump, bottom left as shown in the illustration.

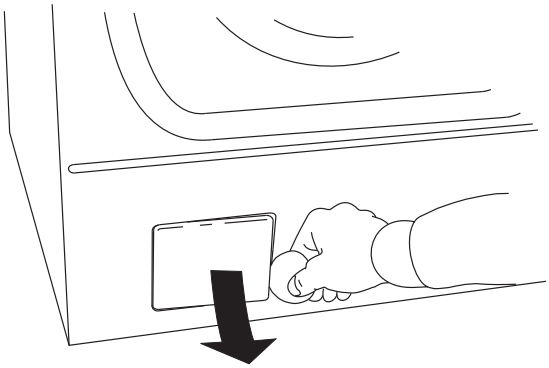

- Unfasten the screws holding the red plastic handle in place.

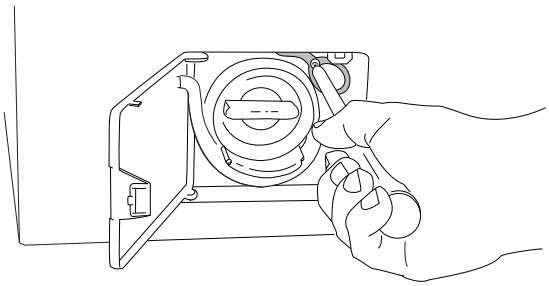

- Pull the handle and the door opens.

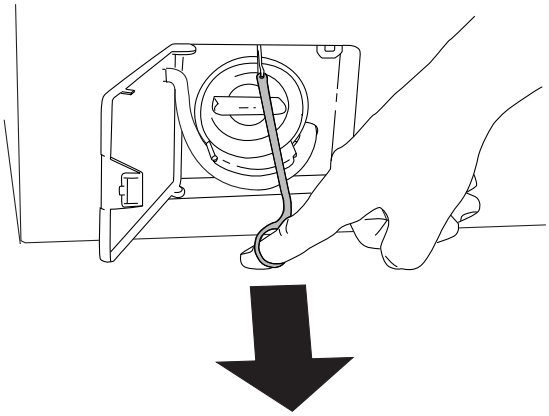

- Insert the handle back into its slot and screw it tight. Close the hatch to the drainage pump.

If the glass door does not open when the wash programme is finished, call the service division.

The machine will not start

1. Is the washer door properly closed? Push it firmly.
2. Is there power? Check your home’s fuses.

Troubleshooting

Error messages

If an error occurs during the programme a message is shown on the display. To exit the message after taking measures, turn the machine off and then back on.

The error messages that may be shown are:

Close the door

If the first red field beside the Start/Stop button is flashing, you have tried to start a programme with the door open. Close the door and the programme will start.

Over filling

If F1 is flashing on the display:

1. Shut off the water tap.
2. Call the service division.

Drainage error

If F3 is flashing in the display, there is a problem with drainage. Check:

- that no objects are stuck in the drainage hose outlet.
- that the drainage pump is not blocked by foreign objects. Clear the pump, see the "Care and cleaning" chapter.
- that there are no kinks in the drainage hose.

After taking measures, run the Drain programme or press the Door opening button (key symbol) to empty the machine. If this does not resolve the problem, call the service division.

Water intake error

If F4 is flashing on the display.

Fault with water supply. Check:

- that the tap on the water pipe is open.
- that the filter in the machine's water intake is not blocked.

1. Shut off the water tap.
2. Unscrew the hose.
3. Clean the filter in the intake valve on the machine.
4. Screw the hose back on.
5. Turn on the tap.
6. Run the program again to check if the fault is fixed.
7. If this does not resolve the problem, call the service division.

Door opening error

if F6 is flashing on the display, call the service division!

Technical information

Technical data

Height:	850 mm
Width:	595 mm
Depth:	585 mm
Weight:	73 kg
Cylinder volume:	50 l
Max. washing capacity:	7 kg
Spin speed (rpm)	800 - 1400
Rated power:	See type plate.
Heater output:	See type plate.
Water pressure:	0,1 - 1 MPa 1 - 10 kp/cm^2 10 - 100 N/cm^2
Wash drum and liquid compartment material:	Stainless steel
Outer casing material:	Powder-coated and hot-galvanized sheet steel or stainless steel.
Water connection:	1,5 m pex pipe
Drain:	1,7 m polypropylene hose 3/4 BSP connection

Information for test institute

Europe:	EN 60456
Washing program:	Normal vit / kulör (Normal), 60°C, 7 kg cotton
Connection:	Cold water 15°C
Test method for noise measurement:	IEC-60704-2-4
Power requirement when machine turned off	< 0,3 W
Power requirement for time-delayed start	< 6,0 W
Power requirement when programme finished	< 3,0 W

Transport protection

Before the machine is used, the three transport protection devices should be removed as shown below.

Each transport protection device consists of a screw, a washer and a rubber spacer. After the protection device has been removed, the rubber spacer acts as a plug for the holes for the device and also as a damper.

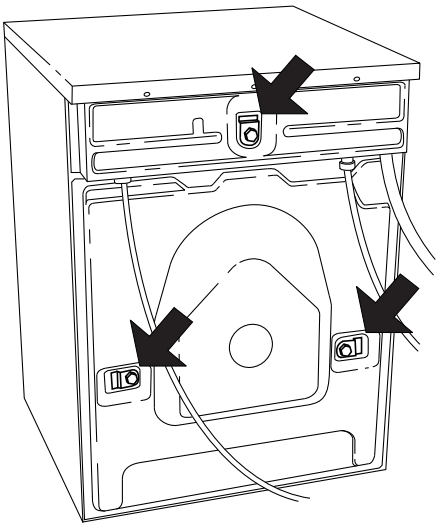

1. First remove the screws and remove the washers.

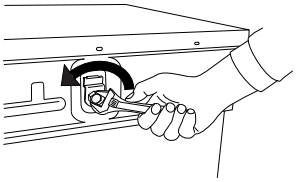

2. Then remove the rubber spacers.

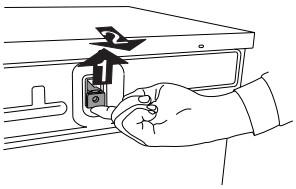

3. Finally, the rubber spacers should be turned over and replaced in the transport protection device holes.

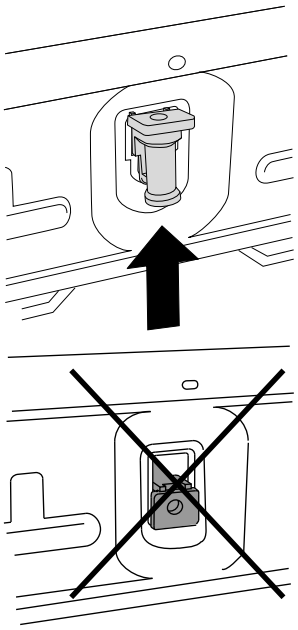

NOTE!

In order to prevent the machine from being damaged when it is transported, use the transport protection device, which locks the entire inner compartment in place. If the transport protection device is missing, you can order one from your retailer.

Item number:

8064206 Rubber spacer

8901037 Bolt

8061767 Washer

Order three of each item!

Installation

Positioning the washing machine

The washing machine can be installed as a built-in or freestanding unit. Position the machine so that the electrical plug is easily accessible.

A. Built-in

The washing machine can be installed under a counter top with a working height of 850-900 mm. Leave a 5 mm space around the entire machine, including between the rear edge of the top cover and the wall behind it.

B. Freestanding

The washing machine can be positioned beside or under a tumble dryer.

Adjusting the feet

Keep the noise that the machine produces to a minimum by adjusting the feet so that the machine is steady and balanced on the floor. Tighten the lock nuts.

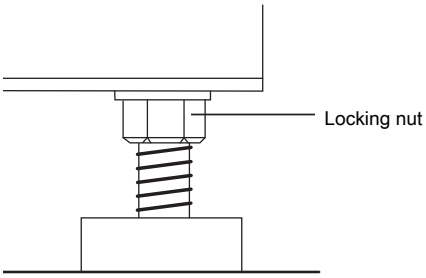

Connection to water supply

Water connection should be carried out by an appropriately qualified person. Connect the machine using the accompanying supply hose. Water pressure should be 0.1–1MPa (approx. 1–10kp/cm^2; 10–100N/cm^2). There should be a stopcock on the water pipe.

If the pipes are newly installed, it may be wise to flush them through so that any dirt is washed away. Otherwise, dirt can clog the filter in the machine's water intake and cut off the water supply.

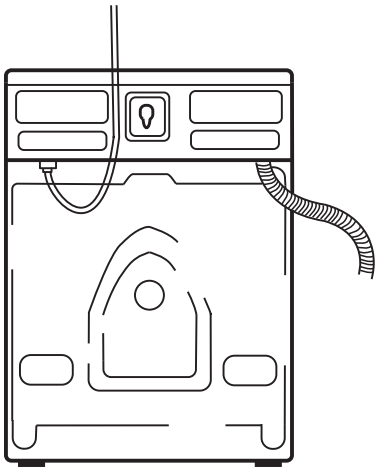

Only use the inlet hose supplied with the machine. Do not reuse old or other loose inlet hoses.

Drainage connection

The machine is supplied with a connected drainage hose that can be fastened to a laundry sink or similar. The height must be 600 - 900 mm above floor level.

The lower position (600 mm) is always preferable. Ensure that the drainage hose has no kinks.

Installation

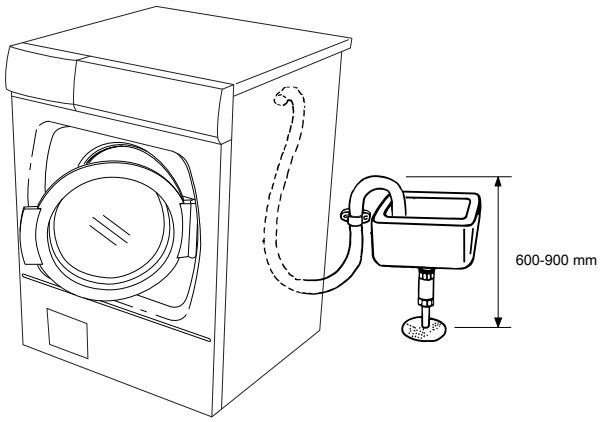

The machine can also be connected to the drain via a spigot connection. In this case the hose should also be 600-900 mm above the floor. The internal diameter of the hole should be at least 18 mm.

- Cut the nipple
- Remove burrs from the hole.

See the illustration.

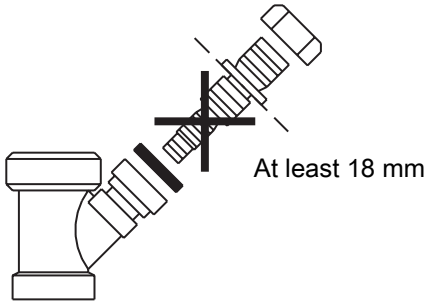

Electrical installation

Electrical connections must be via a plug connected to an earthed wall socket or by cable for fixed installation, with all-pole disconnection, by a qualified professional.

Connection on delivery

The machine is supplied as 1-Phase, 230V, 50Hz, heat output 2000W and has a 10A plug. Any residual current devices must be type A.

NOTE!

Repairs and maintenance relating to safety or performance must be carried out by a qualified professional.

Programme plate in multiple languages

Certain machines include double-sided programme plates in different languages (see the detergent compartment and the bag with the user handbook that comes with the machine).

You can replace or turn the card yourself to get the language most appropriate for you.

To remove the card from its holder in the detergent compartment, press the card with your thumb and push it sideways (see picture).

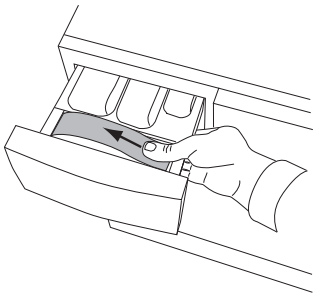

The card will then bend slightly and you can easily remove it. To fit the card, bend it slightly in order to easily insert it into the holder in the detergent compartment.

Service

Before contacting the service division

Before you contact the service division, make sure that you know the model designation, type designation and serial number.

The model designation can be found on the detergent compartment. Type designation and serial number can be found on the type plate above the washer door.

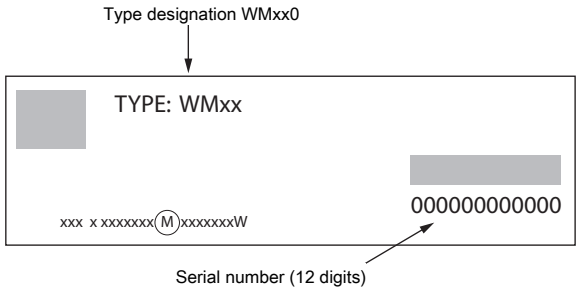

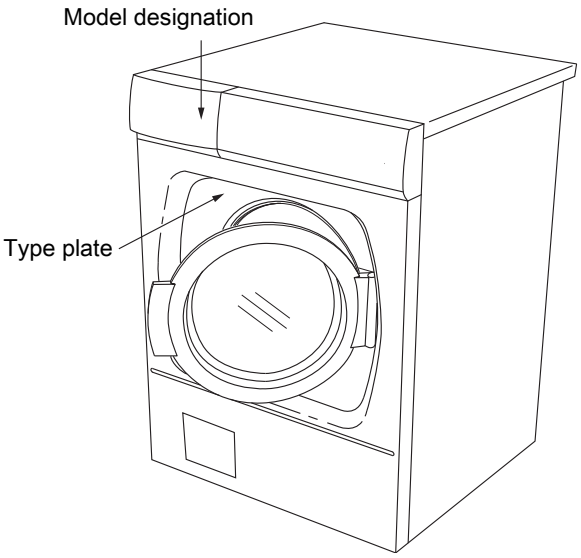

Contact address

Cylinda Service

0771-25 25 00

You only pay the local rate

www.cylinda.se

Your notes

Your notes